



D-Ring Layflat Duct Connectors - Instructions



STEP 1

Tie or tape off farthest end of main duct and the new branch, to keep them inflated





STEP 2

Cut an opening in the main duct where connection will be made, using the inside diameter of the connector as a template. Discard the cut out piece of layflat

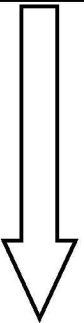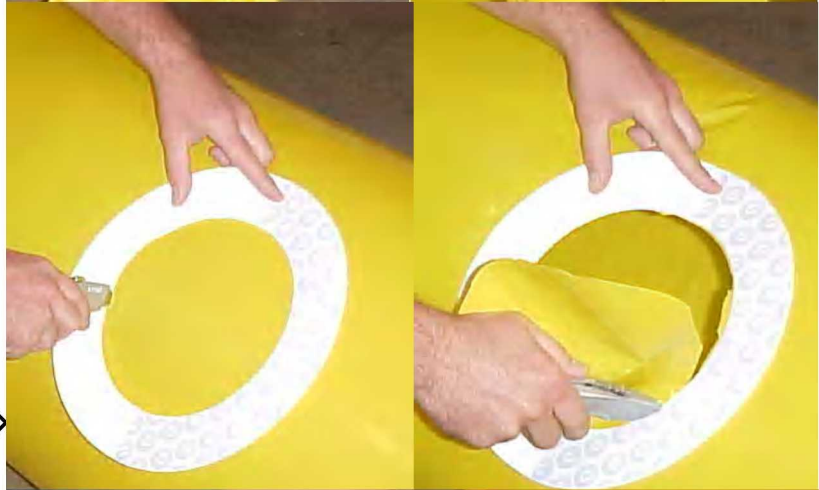

STEP 3



Thread 8-10 inches of lay-flat duct through the center opening of the connector

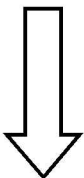


D-Ring Layflat Duct Connectors - Instructions



STEP 4
Fold threaded open end
of layflat back over
connector

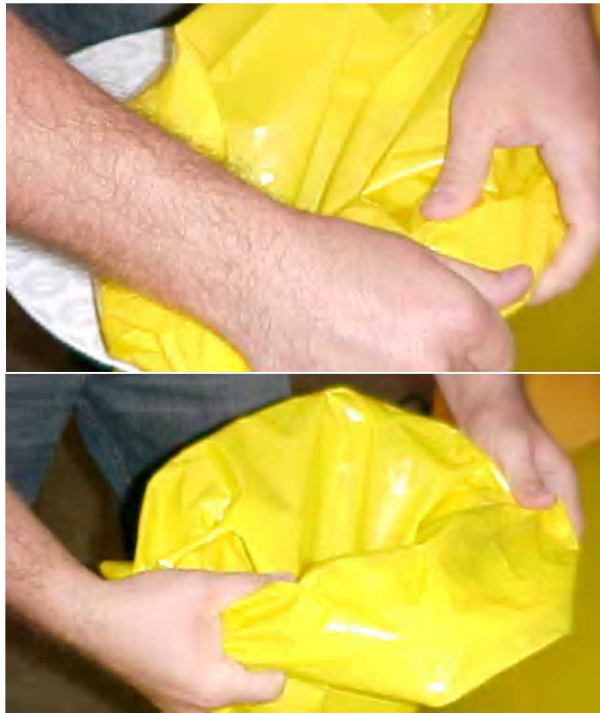

STEP 5
Fold connector in half
and insert into the
opening in the main duct



STEP 6
Release the connector
and pull the duct tight

